



SPARE PARTS Price List MAY 2010

CD PLAYERS		
C303		
<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
SHP591	C303 PITCH CONTROL KNOB	7.23
SHP595	C303 CD DOOR	7.23
SHP597	C303 DISCONTINUED PART SEE PART NUMBER SHP0105	0.00
SHP614	C303 PLATE SHAFT ASSY	50.58
SHP625	C303 CONTROL PCB	144.50
SHP627	C303 CHASSIS - C303	72.25
SHP628	C303 PITCH SLIDER ASSY.	21.68
SHP629	C303 MAIN / SERVO PCB	128.61
SHP631	C303 BUFFER PCB	79.48
NHP0100	C303 CD MECH	65.03
SHP655	C303 RCA OUTPUT JACK	5.78
SHP656	C303 DIGITAL OUTPUT JACK	5.78
SHP672	C303 LEFT PANEL	7.23
SHP673	C303 RIGHT PANEL	7.23
SHP609	C303 TRANSFORMER 120V	28.90
SHP678	C303 TRANSFORMER 220V	28.90
SHP679	C303 TRANSFORMER 240V	28.90
SHP680	C303 TRANSFORMER 100V	28.90
SHP681	C303 6 KEY KNOB - C303.304	7.23
SHP873	C303 6 KEY KNOB - C303/304/314	7.23
SHP874	C303 3 KEY KNOB - C303/304/314	7.23
SHP875	C303 PITCH BEAD KNOB - C303/304/314	4.34
SHP876	C303 OPEN/CLOSE KNOB - C303/304/314	4.34
SHP883	C303 10 KEY KNOB - C303/304/314	13.01
SHP886	C303 MODE KNOB - C303/304/314	4.34
SHP887	C303 FOOT - C303/304/314	4.34
SHP889	C303 POLYFOAMB - C303/304/314	4.34
SHP890	C303 POLYFOAMF - C303/304/314	4.34
SHP0004	C303 POWER CORD EU	8.50
SHP0186	C303 POWER CORD UK	8.50

C304		
<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
SHP594	C304 ENCODER KNOB	4.34
SHP595	C304 CD DOOR	7.23
SHP599	C304 ENCODER PLATE	50.58
SHP612	C304 ENCODER SWITCH	7.23
SHP615	C304 PLATE SHAFT ASSY	23.12
SHP626	C304 CONTROL PCB	108.38
SHP630	C304 BUFFER PCB	79.48
SHP629	C304 PCB ASSY MAIN/SERVO C30	128.61
SHP647	C304 CHASSIS - C304	72.25
NHP0100	C304 CD MECH	65.03
SHP655	C304 RCA OUTPUT JACK	5.78
SHP656	C304 DIGITAL OUTPUT JACK	5.78
SHP609	C304 TRANSFORMER 120V	28.90
SHP678	C304 TRANSFORMER 220V	28.90
SHP679	C304 TRANSFORMER 240V	28.90
SHP680	C304 TRANSFORMER 100V	28.90
SHP672	C304 LEFT PANEL	7.23
SHP673	C304 RIGHT PANEL	7.23
SHP877	C304 7 KEY KNOB - C304/314	10.12
SHP878	C304 5 KEY KNOB - C304/314	7.23
SHP879	C304 2 KEY KNOB - C304/314	7.23
SHP880	C304 + KNOB - C304/314	5.78
SHP881	C304 - KNOB - C304/314	5.78

SHP0004	C304 POWER CORD EU	8.50
SHP0186	C304 POWER CORD UK	8.50

C314

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
SHP654	C314 BUFFER IC	8.67
SHP666	C314 BUFFER PCB ASSY - C314	108.38
NHP0100	C314 CD MECH	65.03
SHP677	C314 CONTROL IC	11.56
SHP741	C314 MAIN / SERVO PCB ASSY - C314	105.49
SHP866	C314 CONTROL PCB ASSY - C314	203.75
CAPG00098	C314 CAPACITOR	7.23
CHAS00005	C314 CHASIS	72.25
SHP594	C314 ROTATE KNOB	4.34
SHP599	C314 PLATE ENCODER	50.58
SHP609	C314 TRANSFORMER 120V	28.90
SHP678	C314 TRANSFORMER 220V	28.90
SHP679	C314 TRANSFORMER 240V	28.90
SHP680	C314 TRANSFORMER 100V	28.90
SHP612	C314 ENCODER SWICH	7.23
SHP873	C314 KNOB 6 KEY	7.23
SHP874	C314 KNOB 3 KEY	7.23
SHP875	C314 KNOB PITCH BEAD	4.34
SHP876	C314 OPEN/CLOSE BUTTON	4.34
SHP877	C314 KNOB 7 KEY	10.12
SHP878	C314 KNOB 5 KEY	7.23
SHP879	C314 KNOB 2 KEY	7.23
SHP880	C314 KNOB POS+	5.78
SHP881	C314 KNOB NEG -	5.78
SHP882	C314 KNOB	5.78
SHP883	C314 KNOB 10 KEY	13.01
SHP884	C314 KNOB SQ REV	2.89
SHP885	C314 KNOB SQ TAP	2.89
SHP886	C314 KNOB MODE CD	4.34
SHP887	C314 FOOT	4.34
SHP889	C314 POLYFOAM BACK	4.34
SHP890	C314 POLYFOAM FRONT	4.34
FADS00001	C314 PITCHFADER	50.58
SHP0004	C314 POWER CORD EU	8.50
SHP0186	C314 POWER CORD UK	8.50

C324

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
FADS00001	C324 PITCHFADER	50.58
HARS00015	C324 BUTTON 6 KEY	7.23
HARS00016	C324 BUTTON 3 KEY	5.07
HARS00017	C324 KNOB PITCH BEAD	4.34
HARS00018	C324 EJECT BUTTON	4.34
HARS00019	C324 BUTTON 7 KEY	6.51
HARS00020	C324 BUTTON 5 KEY	5.78
HARS00021	C324 BUTTON 2 KEY	5.07
HARS00022	C324 BUTTON POS +	2.89
HARS00023	C324 BUTTON NEG -	2.89
HARS00025	C324 BUTTON 10 KEY	14.45
HARS00026	C324 BUTTON REVERSE	2.89
HARS00027	C324 BUTTON TAP	2.89
HARS00028	C324 BUTTON MODE	2.89
MECS00003	C324 CD MECH	122.83
PCAS00026	C324 PCB CONTROL	216.75
PCAS00027	C324 PCB MAIN/SERVO	108.38
PCAS00028	C324 PCB BUFFER	122.83
SHP609	C324 TRANSFORMER	28.90
SHP612	C324 ENCODER	7.23
SHP887	C324 FOOT	4.34
SHP0004	C324 POWER CORD EU	8.50
SHP0186	C324 POWER CORD UK	8.50

C400		
Part Number	Description	Retail Ex Vat
SHP658	C400 Controller Pitch Knob - C400/5	2.89
SHP669	C400 CONTROL PCB ASSY - C400	65.03
NHP0100	C400 CD MECH	65.08
SHP670	C400 MAIN / SERVO PCB ASSY - C400	65.03
SHP671	C400 PITCH FADER	14.45
SHP699	C400 JOG ROTARY KNOB	4.34
XFS00013	C400 TRANSFORMER 110/220V	28.90
SHP0004	C400 POWER CORD EU	8.50
SHP0186	C400 POWER CORD UK	8.50

C402		
Part Number	Description	Retail Ex Vat
HARS00029	C402 KNOB OPEN/CLOSE	0.00
HARS00030	C402 KNOB MAIN	0.00
HARS00031	C402 KNOB 417	0.00
MECS00004	C402 CD MECH	0.00
PANS00005	C402 FRONT PANEL	0.00
PCAS00029	C402 PCB MAIN SERVO	0.00
PCAS00030	C402 PCB ASSY SERVO	0.00
PCAS00031	C402 PCAB ASSY CONTROL	0.00
PCAS00032	C402 PCB ASSY POWER	0.00
PCAS00033	C402 PCB ASSY BUFFER	0.00
PCAS00034	C402 PCB ASSY DIGITAL OUT	0.00
PCAS00035	C402 PCB ASSY PWR & BAL	0.00
SHP0004	C402 POWER CORD EU	8.50
SHP0186	C402 POWER CORD UK	8.50

C500		
Part Number	Description	Retail Ex Vat
SHP660	C500 MAIN/SERVO PCB ASSY CD2 - C500	65.03
SHP671	C500 SLIDE VR - C400 / C500 / C501	14.45
SHP697	C500 MAIN SET POLYFOAM - C500/501	4.34
COSS00001	C500 FACE PLATE MAIN	28.90
COSS00002	C500 FACE PLATE CONTROLLER	28.90
SHP698	C500 CONTROLLER SET POLYFOAM - C500	4.34
NHP0100	C500 CD MECH	65.03
SHP700	C500 DIGITAL OUT PCB ASSY-C500	7.23
SHP701	C500 CONTROLLER PCB ASSY- C500	108.38
SHP702	C500 MAIN/SERVO PCB ASSY CD1 - C500	63.58
SHP717	C500 TRANSFORMER 110/220V	28.90
SHP706	C500 PCB PWR	43.35
SHP0004	C500 POWER CORD EU	8.50
SHP0186	C500 POWER CORD UK	8.50

C501		
Part Number	Description	Retail Ex Vat
SHP705	C501 MAIN SERVO PCB CD 1	72.25
SHP662	C501 MAIN SERVO PCB CD 2	72.25
SHP663	C501 BUFFER PCB ASSEMBLY - C501	93.93
NHP0145	C501 PITCH FADER	11.56
SHP703	C501 DIGITAL OUT PCB ASSY- C501	7.23
SHP704	C501 CONTROLLER PCB ASSY- C501	108.38
NHP0100	C501 CD MECH	65.03
SHP706	C501 PCB PWR	43.35
SHP707	C501 TRANSFORMER 110/220V	28.90
SHP865	C501 DISCONTINUED PART SEE PART NUMBER SHP662	0.00
SHP0004	C501 POWER CORD EU	8.50
SHP0186	C501 POWER CORD UK	8.50

C502		
Part Number	Description	Retail Ex Vat
HARS00029	C502 KNOB OPEN/CLOSE	0.00
HARS00030	C502 KNOB MAIN	0.00
HARS00031	C502 KNOB 417	0.00
MECS00004	C502 CD MECH	0.00
PANS00006	C502 MAIN FRONT PANEL	0.00

PANS00007	C502 CONTROL FRONT PANEL	0.00
PCAS00034	C502 PCB ASSY DIGITAL OUT	0.00
PCAS00036	C502 PCB ASSY POWER	0.00
PCAS00037	C502 PCB ASSY CONTROL	0.00
PCAS00038	C502 PCB ASSY BUFFER CD1	0.00
PCAS00039	C502 PCB ASSY BUFFER CD2	0.00
PCAS00040	C502 PCB ASSY SERVO CD1	0.00
PCAS00041	C502 PCB ASSY SERVO CD2	0.00
XFRS00014	C502 TRANSFORMER	0.00
SHP0004	C502 POWER CORD EU	8.50
SHP0186	C502 POWER CORD UK	8.50

S250

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
SHP0166	S250 STOP BUTTON	2.89
SHP0167	S250 CONTROL KNOB ASSY	10.12
SHP0168	S250 GEAR WHEEL CHASSIS	2.89
SHP0169	S250 SHAFT HOLDER	2.89
SHP0170	S250 FOOT	4.34
SHP0172	S250 TOP CHASSIS	21.68
SHP0173	S250 BOTTOM CHASSIS	28.90
SHP0174	S250 CD MECH	36.13
SHP0175	S250 TRANSFORMER 110/230V	36.13
PCAS00023	S250 CONTROL PCB	57.80
PCAS00024	S250 MAIN PCB ASSY.	72.25
PCAS00025	S250 PCB ASSY PWR S250	14.45
SHP0179	S250 CD DOOR	11.56
SHP0183	S250 LCD - S250	14.45
SHP0184	S250 DOOR OPEN/CLOSE BUTTON	2.89
SHP0590	S250 S250 CIRCULAR PLASTIC ASSY.	14.45
SHP0004	S250 POWER CORD EU	8.50
SHP0186	S250 POWER CORD UK	8.50

S300

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
DORS00005	S300 CD DOOR ASSY	13.01
PCAS00012	S300 BUFFER PCB ASSY	75.14
PCAS00013	S300 SERVO PCB ASSY	82.37
PCAS00014	S300 CONTROL PCB ASSY	65.03
PCAS00015	S300 PHONE PCB ASSY	7.23
HARS00014	S300 SPEED PUSH BUTTON ABS	2.89
XFRS00012	S300 TRANSFORMER (AC150,230V, 60/50Hz, EI-57)	36.13
CHAS00003	S300 CHASIS-NA	57.80
SHP0174	S300 CD MECH.	36.13
SHP0004	S300 POWER CORD EU	8.50
SHP0186	S300 POWER CORD UK	8.50

CD Mixers

CM203

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
DORS00001	CM203 CD DOOR ASS'Y	11.56
DORS00002	CM203 CD DOOR	7.23
SHAS00001	CM203 CD DOOR SHAFT	4.34
SPRS00001	CM203 SPRING FOR CD DOOR	2.89
PCAS00001	CM203 CONTROL PCB ASS'Y	50.58
PCAS00002	CM203 MIXER PCB ASS'Y	65.03
PCAS00003	CM203 POWER & IO PCB ASS'Y	30.35
PCAS00004	CM203 PHONE PCB ASS'Y	14.45
PCAS00005	CM203 CROSS FADER PCB ASS'Y	28.90
HARS00001	CM203 POWER KNOB	2.89
SHP0174	CM203 CD MECH ASSY	36.13
HARS00002	CM203 KNOB PROTECTOR	2.89
HARS00003	CM203 EQ KNOB(ABS,SILVER)	2.89
HARS00012	CM203 GEAR WHEEL BASE	2.89
HARS00004	CM203 ROTATE KNOB	2.89
HARS00006	CM203 FOOT STOCK	5.78
HARS00005	CM203 PUSH KNOB	2.89

CHAS00001	CM203 CHASSIS	79.48
SHAS00002	CM203 DOOR LOCK SHAFT	2.89
SHAS00003	CM203 SHAFT FIXED	2.89
SHAS00004	CM203 SHAFT(SHORT)	4.34
HARS00007	CM203 BRACKET TRANSFORMER	4.34
PANS00001	CM203 BOTTOM BASE	50.58
PANS00002	CM203 BACK COVER	7.23
PANS00003	CM203 SIDE BOARD	21.68
PANS00004	CM203 SHAFT PLATE	4.34
SHP0004	CM203 POWER CORD EU	8.50
SHP0186	CM203 POWER CORD UK	8.50

CM205

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
DORS00003	CM205 CD DOOR ASSY	10.12
DORS00004	CM205 CD DOOR	5.78
SHAS00001	CM205 CD DOOR SHAFT	4.34
SPRS00001	CM205 SPRING FOR CD DOOR	2.89
PCAS00006	CM205 CONTROL PCB ASSY	46.24
PCAS00007	CM205 MIXER PCB ASSY	79.48
PCAS00008	CM205 POWER & IO PCB ASSY	37.57
PCAS00009	CM205 BUFFER PCB ASSY	78.03
PCAS00004	CM205 PHONE PCB ASSY	14.45
PCAS00005	CM205 CROSS FADER PCB ASSY	28.90
PCAS00010	CM205 CD1 SERVO PCB ASSY	46.24
PCAS00011	CM205 CD2 SERVO PCB ASSY	44.80
HARS00001	CM205 POWER KNOB	2.89
SHP0174	CM205 CD MECH ASSY	36.13
HARS00002	CM205 KNOB PROTECTOR	2.89
HARS00003	CM205 EQ KNOB(ABS,SILVER)	2.89
HARS00012	CM205 GEAR WHEEL BASE	2.89
HARS00004	CM205 ROTATE KNOB	2.89
HARS00006	CM205 FOOT STOCK	5.78
HARS00005	CM205 PUSH KNOB	2.89
CHAS00002	CM205 CHASSIS US	79.48
SHAS00002	CM205 DOOR LOCK SHAFT	2.89
SHAS00003	CM205 SHAFT FIXED	2.89
SHAS00004	CM205 SHAFT(SHORT)	4.34
HARS00007	CM205 BRACKET TRANSFORMER	4.34
PANS00001	CM205 BOTTOM BASE	50.58
PANS00002	CM205 BACK COVER	7.23
PANS00003	CM205 SIDE BOARD	21.68
PANS00004	CM205 SHAFT PLATE	4.34
XFRS00008	CM205 TRANSFORMER COVER ASSY CM EU	43.35
XFRS00009	CM205 TRANSFORMER COVER ASSY CM AU UK	43.35
SNKS00001	CM205 HEAT SINK	11.56
CLPS00001	CM205 LOCKING CABLE CLIP(WC-1AM-M9B,_5.6,L=35.6mm,BLACK)	2.89
CLPS00002	CM205 LOCKING CABLE CLIP(WC-7-M9B,_9,L=70mm,BLACK)	2.89
SPRS00002	CM205 SPRING FOR SHAFT	2.89
SPRS00003	CM205 SPRING FOR DOOR	2.89
HARS00008	CM205 9 KEY KNOB	10.12
HARS00009	CM205 STOP KNOB	2.89
SHP0004	CM205 POWER CORD EU	8.50
SHP0186	CM205 POWER CORD UK	8.50

Mixers

M201

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
SHP747	M201 PUSH KNOB M201A	2.89
SHP748	M201 ROTATE KNOB M201A	2.89
SHP749	M201 EQ KNOB(ABS,SILVER) M201A	2.89
SHP750	M201 CHASSIS M201A	36.13
SHP751	M201 FOOT STOCK M201A	4.34
SHP752	M201 JOG TUNING KNOB M201A	2.89
SHP755	M201 BOTTOM BASE M201A	36.13
PS-SMXUS	M201 POWER SUPPLY 110/V	21.68

PS-SMXEU	M201 POWER SUPPLY 220V	21.68
SHP759	M201 RCA ADAPTOR PLUG(A028) M201A	5.78
SHP762	M201 MIXER PCB ASSEMBLY M201A	79.48
SHP763	M201 LEVER SW(LBC22B-085) M201A	4.34
SHP773	M201 CUE LEVEL POT M201/M202	4.34
SHP774	M201 CUE PAN FADER/VR - M201/M202	7.23
SHP775	M201 MIC VOLUME POTS M201/M202	2.89
SHP776	M201 MIC EQ POTS M201/M202	4.34
SHP777	M201 GAIN/MASTER POT - M201/M202	4.34
SHP783	M201 PCB ASSY PWR M201A	36.13
SHP784	M201 DC POWER JACK M201A	4.34
SHP785	M201 2P RCA JACK M201A	2.89
SHP790	M201 INPUT PCB ASSEMBLY M201A	50.58
SHP791	M201 4P RCA JACK M201A \$2.55	4.34
SHP796	M201 CROSS FADER PCB ASSEMBLY M201A	28.90
SHP798	M201 ROTARY VR M201A	28.90
SHP799	M201 MIC PCB ASSEMBLY M201A	14.45
SHP801	M201 PHONE PCB ASSEMBLY M201A	4.34
SHP803	M201 MIC JACK M201A	4.34
SHP861	M201 LINEFADER KNOB M201/202 CM203	5.78
SHP864	M201 CH. 1 & 2 LINE FADER VR M201A	11.56

M202

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
CF202	M202 CROSSFADER FOR M202	26.01
SHP721	M202 MAIN PCB M202	65.03
SHP723	M202 MIC INPUT/OUTPUT JACK M202	4.34
SHP724	M202 INPUT/OUTPUT JACK M202	2.89
SHP725	M202 REAR PANEL W/POWER SW M202	4.34
SHP773	M202 CUE LEVEL POT M201/M202	4.34
SHP774	M202 CUE PAN FADER/VR - M201/M202	7.23
SHP804	M202 PUSH KNOB M202A	2.89
SHP805	M202 ROTATE KNOB M202A	2.89
SHP806	M202 EQ KNOB(ABS, SILVER) M202A	2.89
SHP807	M202 CHASSIS M202A	57.80
SHP808	M202 FOOT STOCK M202A	5.78
SHP809	M202 JOB TUNING KNOB M202A	2.89
SHP811	M202 BOTTOM BASE M202A	43.35
SHP814	M202 SWITCH PWR M202A	4.34
SHP815	M202 TRANSFORMER M202A	47.69
SHP816	M202 RCA ADAPTOR PLUG M202A	4.34
SHP819	M202 INPUT PCB ASSEMBLY M202A	57.80
SHP822	M202 4P RCA JACK M202A	4.34
SHP827	M202 MIC PCB ASSEMBLY M202A	43.35
SHP829	M202 MIC JACK M202A	4.34
SHP830	M202 PHONE PCB ASSEMBLY M202A	50.58
SHP832	M202 MIXER PCB ASSEMBLY M202A	93.93
SHP833	M202 LEVER SW M202A	4.34
SHP848	M202 PCB ASSY PWR M202A	36.13
SHP849	M202 DC POWER JACK M202A	4.34
SHP850	M202 HEADPHONE JACK M202A	4.34
SHP851	M202 2P RCA JACK M202A	4.34
SHP857	M202 CROSS FADER PCB ASSEMBLY M202A	28.90
SHP859	M202 ROTARY VR (100KB) M202A	24.57

M303

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
CF303	M303 CROSSFADER FOR M303	28.90
LF303	M303 LINE FADER FOR M303	28.90
SFS0301	M303 CUE FADER KNOB - M303/M304	2.89
SFS0302	M303 ROTARY KNOB - SMALL M303/M304	2.89
SFS0303	M303 PFL/Zone Push Switch - M303	2.89
SFS0304	M303 BUTTON PWR PUSH M303/M304	2.89
SFS0306	M303 ROTARY KNOB - BIG M303/M304	2.89
SFS0307	M303 FADER KNOB - M303/M304	2.89
SFS0310	M303 KILL SWITCH KNOB - M303/M304	2.89

SFS0311	M303 MIC PUSH BUTTON - M303	2.89
SFS0312	M303 Channel/Line Push Knob - M303	2.89
SFS0314	M303 Cue Pan Slider VR - M303/304	14.45

M304

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
CF304	M304 P&G CROSSFADER FOR M304	93.93
LF304	M304 LINE FADER FOR M304	23.12
SFS0301	M304 CUE FADER KNOB - M303/M304	2.89
SFS0302	M304 ROTARY KNOB - SMALL M303/M304	2.89
SFS0304	M304 BUTTON PWR PUSH M303/M304	2.89
SFS0305	M304 Channel/Line Push Knob - M304	2.89
SFS0306	M304 ROTARY KNOB - BIG M303/M304	2.89
SFS0307	M304 FADER KNOB - M303/M304	2.89
SFS0308	M304 MIC PUSH KNOB - M304	2.89
SFS0310	M304 KILL SWITCH KNOB - M303/M304	2.89

M505

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
CF505	M505 CROSSFADER FOR M505	54.91
LF505	M505 LINEFADER FOR M505	23.12

RM100

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
LFRM19	RM100 LINEFADER FOR RM50 RM100 ONLY	26.01
NFS0133	RM100 20mm Balance Slider - RM100/RM	2.89
NFS0210	RM100 Gain/Cue Pan pot-SMX501/RM100	4.34
NFS0211	RM100 Tone pot-RM100/RM80/SK6F/SK6/P	4.34
NFS0212	RM100 Output/level pot-RM100/RM80/RM	4.34
NFS0309	RM100 XLR Jack - SMX501/RM100/RM80/R	4.34
NFS0310	RM100 BNC connector-RM100/RM80/RM50	4.34
SFS0131	RM100 LED Bar Display (Ch.) - RM100	14.45
SFS0133	RM100 SWITCH PWR RM100/RM80/RM50	2.89
SFS0135	RM100 Stereo/Mono/Split Switch-RM100	2.89
SFS0136	RM100 Cue Pan Slider - SA5/RM100/RM8	10.12
SFS0137	RM100 Mic Tone Pot. - SMX501/RM100	4.34

RM22

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
CFRM22	RM22 CROSSFADER FOR RM22	36.13
SFS0256	RM22 Face Plate RM22	28.90
SFS0257	RM22 Rear Pcb Assy RM22	72.25
SFS0258	RM22 Main PCB Assy RM22	108.38
SFS0259	RM22 RT Knob w/new inset-RM22	2.89
SFS0260	RM22 SWITCH PWR ON/OFF RM22	2.89
SFS0261	RM22 Master TRim Pot RM22	4.34
SFS0263	RM22 Mic Talkover Switch -RM22	2.89
SFS0264	RM22 EQ Slider (VR)-RM22	24.57
SFS0265	RM22 Line/Master Fader (VR)-RM22	28.90
SFS0266	RM22 Gain/Zone/Booth Pot-RM22	4.34
SFS0267	RM22 Mic TOne Pot-RM22	4.34
SFS0268	RM22 Mic 1&2 Level Pot RM22	4.34
SFS0269	RM22 Cue Level Pot-RM22	4.34

RM3S

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
CFRM3S	RM3S CROSSRADER	24.57
NFS0110	RM3S Push knob-RM3S/RM3/PDJ90/60	2.89
NFS0113	RM3S Toggle (2 way) Switch - RM3S/S	2.89
NFS0132	RM3S Input Select Sw.-RM3S/RM3/PRO	5.78
NFS0200	RM3S Gain Pot-RM3S/SK2FLTD/SK2F/SK2	4.34
NFS0201	RM3S Tone Pot-RM3S/SK2FLTD/SK2F/SK2	4.25
NFS0304	RM3S Headphone jack-RM3S/RM3/PDJ90	4.34
SFS0022	RM3S Cue Pan Slider - RM3S/SK2FLTD	14.45
SFS0107	RM3S Kill Switch - SMX401/301/RM3S	2.89
SFS0109	RM3S Input/Output PCB Assy - RM3S/R	50.58
SFS0110	RM3S Mic PCB Assy - RM3S/RM3	57.80
SFS0115	RM3S Front Panel - RM3S/RM3	28.90
SFS0116	RM3S Rear Panel - RM3S/RM3	21.68

RM404

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
CF404	RM404 Crossfader for RM404	43.35
SFS0279	RM404 Mic Tone Pot-RM404/406	4.34
SFS0270	RM404 Rear PCB Assy -RM404	95.37
SFS0272	RM404 CH.Gain/Zone Pot-RM404/406	4.34
SFS0273	RM404 CH.Tone Pot-RM404	4.34
SFS0274	RM404 Line/MStr Fader (VR) -RM404/40	14.45
SFS0275	RM404 Cue Pan Slider (VR) - RM404/40	14.45
SFS0276	RM404 Master Pan Pot-RM404/406	4.34
SFS0277	RM404 Cue Level Pot-RM404/406	4.34
SFS0278	RM404 Mic 1&2 Level Pot -RM404/406	4.34
SFS0279	RM404 Mic Tone Pot - RM404/406	4.34
SFS0280	RM404 Rt Knob(w/ cut out) - RM404/40	2.89
SFS0281	RM404 Line/Xfader Knob - RM404/406	2.89
SFS0282	RM404 Cue Knob - RM404/406	2.89
SFS0283	RM404 Split Knob - RM404/406	2.89
SFS0284	RM404 Rt Knob(no cut out) - RM404/40	2.89
SFS0285	RM404 Master(XLR) Jack - RM404/406	5.78
SFS0286	RM404 Main PCB Assy - RM404	245.65

RM406

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
CF406	RM406 Crossfader for RM406	30.35
SFS0289	RM406 Xover Frequency Pot -RM406	4.34
SFS0290	RM406 Sub Trim Pot - RM406	4.34
SFS0291	RM406 Master Trim Pot - RM406	4.34
SFS0292	RM406 Ch Tone Pot - RM406	4.34
SFS0294	RM406 CF Curve Pot - RM406	4.34
SFS0296	RM406 FX Knob - RM406	2.89
SFS0297	RM406 Rear PCB Assy - RM406	108.38
SFS0298	RM406 Main PCB Assy - RM406	325.13
SFS0300	RM406 FACEPLATE FOR RM406	28.90

RM50

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
LFRM19	RM50 LINEFADER FOR RM50 RM100 ONLY	26.01
NFS0214	RM50 Balance pot-RM50/PDJ50	4.34
NFS0310	RM50 BNC connector-RM100/RM80/RM50/	4.34
PS-RM19EU	RM50 EU POWER SUPPLY(220V) - RM50/8	28.90
PS-RM19UK	RM50 UK POWER SUPPLY(240V) - RM50/R	28.90
PS-RM19US	RM50 US POWER SUPPLY(110V) - RM50/R	28.90
PS19EU	RM50 POWER SUPPLY 220V SMX501, RM50	28.90
SFS0133	RM50 SWITCH PWR RM100/RM80/RM50	2.89

RM80

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
NFS0211	RM80 Tone pot-RM100/RM80/SK6F/SK6/P	4.34
NFS0212	RM80 Output/level pot-RM100/RM80/RM	4.34
NFS0309	RM80 XLR Jack - SMX501/RM100/RM80/R	4.34
NFS0310	RM80 BNC connector-RM100/RM80/RM50	4.34
SFS0133	RM80 SWITCH PWR RM100/RM80/RM50	2.89
SFS0150	RM80 Face Plate - RM80	33.24

SA12

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
CF-PG110	SA12 LINE/X-FADER FOR SA12 (P&G)	93.93
MOD2	SA12 Filter Module for SA12	65.03
PS-SA12EU	SA12 EU POWER SUPPLY(220V) - SA12	28.90
PS-SA12UK	SA12 UK POWER SUPPLY(240V) - SA12	28.90
SHP0531	SA12 Face Plate (Top) - SA12	43.35
SHP0532	SA12 Face Plate (Bottom) - SA12	43.35
SHP0533	SA12 Control PCB Assy - SA12	397.38
SHP0535	SA12 FX On/Off Knob - SA12	2.89
SHP0536	SA12 Crossfader Select Switch -SA12	2.89
SHP0537	SA12 Headphone Mute Knob - SA12	2.89
SHP0538	SA12 Toggle Post (Flat) - SA12	2.89

SHP0539	SA12 Rotary Curve Knob - SA12	2.89
SHP0542	SA12 I/O PCB Assy - SA12	99.71
SHP0543	SA12 Rear Plate - SA12	14.45
SHP0544	SA12 Bottom Cover - SA12	28.90
SHP0545	SA12 Sound Effects PCB Assy -	114.16
SHP0546	SA12 Curve/Reverse PCB Assy - SA12	91.04
SHP0547	SA12 KNOB PWR ON/OFF SA12	2.89
SHP0550	SA12 OS2 Lock Switch - SA12	2.89
SHP0551	SA12 Headphone Mute Switch - SA12	2.89
SHP0552	SA12 Cue Select Switch - SA12	2.89
SHP0553	SA12 PGM Reverse Switch - SA12	2.89
SHP0560	SA12 Master Pot. - SA12	4.34
SHP0561	SA12 Channel EQ Slider - SA12	14.54
SHP0562	SA12 Gain/Cue/Mic Level Pot. - SA12	4.34
SHP0563	SA12 Channel Pan Slider - SA12	14.45
SHP0564	SA12 Mic EQ Pot. - SA12	4.25
SHP0565	SA12 Cue Pan Slider - SA12	11.56
SHP0566	SA12 FX (On/Off) Switch - SA12	2.89
SHP0574	SA12 Mic/Line3/Mono-Stereo Sw -SA12	2.89
SHP0575	SA12 Balanced Out Jack (1/4") -SA12	5.78
SHP0576	SA12 RCA Input Jack (6P) - SA12	10.12
SHP0577	SA12 Mic In/FX Out Jack(1/4") -SA12	7.23
SHP0578	SA12 RCA In/Out Jack (4P) - SA12	7.23
SHP0581	SA12 Output Trim Pot. - SA12	4.34
SHP0582	SA12 Curve (PGM/X-Fader) Pot. -SA12	4.34
SHP0584	SA12 Reverse Switch - SA12	2.89
SHP0586	SA12 Headphone Jack(3.5mm) - SA12	5.78

SA3

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
3PLSA3	SA3 3 PHONO LINE SELECTOR FOR SA3	17.34
CFSA3	SA3 CROSSFADER FOR SA3	28.90
LFA3	SA3 LINE FADER FOR SA3	28.90
PPSA3	SA3 PROTEKT PANEL FOR SA3	26.01
PPSA3	SA3 BB BOTTOM BOX PANEL FOR SA3	86.70
PS18JA	SA3 POWER SUPPLY 100V SA3	28.90
SFS0249	SA3 REAR PANEL	21.68
SFS0250	SA3 FRONT PANEL	21.68
SFS0251	SA3 MIC PCB ASSY	28.90
SFS0252	SA3 CHANNEL PCB ASSY	50.58
SFS0253	SA3 MASTER/POWER PCB ASSY	65.03
SFS0254	SA3 CUE/MASTER PCB ASSY	43.35
SFS0255	SA3 CURVE PCB ASSY	43.35
SHP0503	SA3 KNOB FADER	2.89

SA5

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
CF-PGSA5	SA5 PG CROSS & LINE FADER FOR SA-5	79.48
PPSA5	SA5 BB BOTTOM BOX PANEL FOR SA5	82.37
NFS0303	SA5 MIC JACK	4.34
PS16EU	SA5 POWER SUPPLY 220V	28.90
PS16US	SA5 POWER SUPPLY 110V	28.90
SFS0064	SA5 SWITCH X-FADER SELECT	4.34
SFS0136	SA5 SLIDER CUE PAN	10.12
SFS0215	SA5 RCA JACK	4.34
SFS0230	SA5 FACE PLATE UPPER	28.90
SFS0231	SA5 FACE PLATE LOWER	28.90
SFS0234	SA5 PCB ASSY I/O	93.93
SFS0235	SA5 PCB MAIN	101.15
SFS0236	SA5 PCB ASSY FADER CURVE	28.90
SFS0238	SA5 FADER KNOB BUTTON	2.89
SFS0243	SA5 SLIDER MASTER	10.12
SFS0244	SA5 SLIDER EQ	10.12
SFS0245	SA5 SLIDER CYE LEVEL	10.12
SFS0246	SA5 SLIDER CH GAIN	10.12

SMX201

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
SHP0529	SMX201 FACE PLATE	28.90
SHP0530	SMX201 BOTTOM COVER	28.90
SHP0502	SMX201 ROTARY KNOB	2.89
SHP0503	SMX201 FADER KNOB	2.89
SHP0535	SMX201 FX ON/OFF KNOB	2.89
SHP0537	SMX201 HEADPHONE MUTE KNOB	2.89
SHP0538	SMX201 TOGGLE POST FLAT	2.89
SHP0547	SMX201 KNOB PWR ON/OFF SA12	2.89
CFSMX	SMX201 CROSS FADER	28.90
PS-SMXEU	SMX201 POWER SUPPLY 220V	28.90
PS-SMXUK	SMX201 POWER SUPPLY 240V	28.90
SHP0515	SMX201 LINE FADER	10.12

SMX211

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
CFSMX	SMX211 X-FADER	28.90
PS-SMXEU	SMX211 POWER SUPPLY 220V	28.90
PS-SMXUK	SMX211 POWER SUPPLY240V	28.90
PS-SMXU	SMX211 S POWER SUPPLY 110V	28.90
SHP0500	SMX211 FACE PLATE	36.13
SHP0501	SMX211 BOOTOM COVER	21.68
SHP0502	SMX211 ROTARY KNOB	2.89
SHP0507	SMX211 SWITCH PWR	2.89
SHP0508	SMX211 PHONO LINE SWITCH	2.89
SHP0509	SMX211 FADER START SWITCH	2.89
SHP0511	SMX211 EMITTING DIODE	2.89
SHP0515	SMX211 LINE FADER	10.12
SHP0516	SMX211 CH. TONE POT	4.34
SHP0517	SMX211 CH GAIN POT	4.34
SHP0519	SMX211 MIC LEVEL POT	4.34
SHP0520	SMX211 MIC TONE POT	4.34
SHP0524	SMX211 RCA JACK 6P	4.34
SHP0525	SMX211 RCA JACK 4P	4.34
SHP0526	SMX211 FADER START JACK	4.34
SHP0527	SMX211 MIC JACK	4.34

TurnTables

ST150

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
SHP0321	ST150 COUNTER WEIGHT ASSY	13.01
SHP0322	ST150 TARGET LIGHT ASSY	21.68
SHP0323	ST150 PLATTER	65.03
SHP0327	ST150 TONEARM ASSY ST150	130.05
SHP0329	ST150 TRANSFORMER 110V	36.13
SHP0344	ST150 TRANSFORMER 220V	50.58
SHP0331	ST150 START STOP ASSY	14.45
SHP0332	ST150 MAIN PCB	180.63
SHP0333	ST150 MOTOR ASSY	209.53
SHP0334	ST150 VELOCITY PCB	28.90
SHP0335	ST150 PCB ASSY PWR	36.13
SHP0336	ST150 OUTPUT PCB ASSY	21.68
SHP0337	ST150 TARGET LIGHT JACK	4.34
SHP0338	ST150 PITCH KNOB	2.89
SHP0340	ST150 START/BRAKE SPEED POT	4.34
SHP0345	ST150 FOOT ASSY (1)	10.12
SHP0346	ST150 REST/HOOK ASSY TONEARM ST150	7.23
SHP0004	ST150 POWER CORD EU	8.50
SHP0186	ST150 POWER CORD UK	8.50

STR8150

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
SHP0321	STR8150 COUNTER WEIGHT ASSY	13.01
SHP0322	STR8150 TARGET LIGHT ASSY	21.68
SHP0323	STR8150 PLATTER	65.03
SHP0328	STR8150 TONEARM ASSY	130.05
SHP709	STR8150 TRANSFORMER 120V	28.90

SHP0329	STR8150 TRANSFORMER 110V	36.13
SHP0344	STR8150 TRANSFORMER 220V	50.58
SHP0331	STR8150 START STOP ASSY	14.45
SHP0332	STR8150 MAIN PCB	180.63
SHP0333	STR8150 MOTOR ASSY	209.53
SHP0334	STR8150 VELOCITY PCB	28.90
SHP0335	STR8150 PCB ASSY PWR	36.13
SHP0336	STR8150 OUTPUT PCB ASSY	21.68
SHP0337	STR8150 TARGET LIGHT JACK	4.34
SHP0338	STR8150 PITCH KNOB	2.89
SHP0340	STR8150 START/BRAKE SPEED POT	4.34
SHP0345	STR8150 FOOT ASSY (1)	10.12
SHP0346	STR8150 REST/HOOK ASSY TONEARM ST150	7.23
SHP0004	STR8150 POWER CORD EU	8.50
SHP0186	STR8150 POWER CORD UK	8.50

T50

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
SHP592	T50 PITCH FADER KNOB	2.89
SHP596	T50 45 ADAPTOR	4.34
SHP709	T50 TRANSFORMER 120V	28.90
SHP610	T50 TRANSFORMER 110V	28.90
SHP635	T50 START STOP PCB ASSY	21.68
SHP636	T50 SUB START PCB ASSY	21.68
SHP637	T50 OUTPUT PCB ASSY	21.68
SHP639	T50 TONEARM ASSY	50.58
SHP683	T50 PCB ASSY PWR T50	28.90
SHP684	T50 MAIN PCB	53.47
SHP711	T50 TRANSFORMER 230V	28.90
HOKS00003	T50 TONEARM REST ASSY	4.34
SHP646	T50 RCA LIGHT JACK	2.89
SHP0033	T50 PITCH CONTROL FADER	14.45
SHP0001	T50 COUNTER WEIGHT	8.67
NHP0003	T50 PLATTER	43.35
SHP0004	T50 POWER CORD EU	8.50
SHP0186	T50 POWER CORD UK	8.50

T6C

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
SHP596	T60 45 ADAPTOR	4.34
SHP610	T60 TRANSFORMER 110V	28.90
SHP633	T60 PCB ASSY PWR T60	21.68
SHP634	T60 MAIN PCB	65.03
SHP636	T60 SUB START PCB ASSY	21.68
SHP637	T60 OUTPUT PCB ASSY	21.68
SHP638	T60 MOTOR ASSY	65.03
SHP710	T60 TRANSFORMER 230V	28.90
SHP639	T60 TONEARM ASSY	50.58
SHP0033A	T60 PITCH CONTROL SLIDER	14.45
SHP646	T60 RCA LIGHT JACK	2.89
SHP592	T60 PITCH FADER KNOB	2.89
SHP0001	T60 COUNTERWEIGHT	8.67
HOKS00003	T60 TONEARM REST ASSY	4.34
SHP0004	T60 POWER CORD EU	8.50
SHP0186	T60 POWER CORD UK	8.50

T8C

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
SHP608	T80 TRANSFORMER 110V	28.90
SHP632	T80 MOTOR ASSY	65.03
SHP640	T80 MAIN PCB	115.60
SHP641	T80 P/L OUTPUT PCB	21.68
SHP642	T80 SUB START PCB ASSY	21.68
SHP643	T80 START STOP SPEED PCB ASSY	17.34
SHP644	T80 PCB ASSY PWR T80	21.68
SHP645	T80 LED PCB ASSY	17.34
SHP708	T80 TRANSFORMER 230V	28.90

SHP639	T80 TONEARM ASSY	50.58
HOKS00003	T80 TONEARM REST ASSY	4.34
SHP646	T80 RCA LIGHT JACK	2.89
SHP0033	T80 PITCH CONTROL SLIDER	14.45
SHP592	T80 PITCH FADER KNOB	2.89
SHP0001	T80 COUNTERWEIGHT	8.67
SHP0032	T80 45 ADAPTOR	5.78
SHP0004	T80 POWER CORD EU	8.50
SHP0186	T80 POWER CORD UK	8.50

T90USB

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
ARMS00001	T90USB TONE ARM ASSY T90	57.80
COWS00001	T90USB COUNTERWEIGHT T90	13.01
PCAS00016	T90USB PCB ASSY SWICH	10.12
PCAS00017	T90USB PCB ASSY MAIN	72.25
PCAS00018	T90USB PCB MASTER	93.93
PCAS00019	T90USB PCB ASSY PWR/USB/OUT NA	65.03
PCAS00020	T90USB PCB ASSY PWR/USB/OUT EU/UK	65.03
SHP608	T90USB TRANSFORMER 110V NA	28.90
SHP708	T90USB TRANSFORMER 240V	28.90
SHP0004	T90USB POWER CORD EU	8.50
SHP0186	T90USB POWER CORD UK	8.50

SPEAKERS

ATM6

<u>Part Number</u>	<u>Description</u>	<u>Retail Ex Vat</u>
AMPS00001	ATM6 AMPLIFIER ATM6 100V	106.93
AMPS00002	ATM6 AMPLIFIER ATM6 120V	106.93
AMPS00003	ATM6 AMPLIFIER ATM6 240V	106.93
TRMS00001	ATM6 TRIM RING ATM6	7.23
TWTK00012	ATM6 TWEETER TWK1 ATM6	28.90
WOF60101	ATM6 WOOFER LFS6A ATM6	43.35